

DCSQ Therm

Circular diffuser with adjustable cones made up of concentric truncated cone profiles on a square panel, suitable for installation on false ceilings with 600x600mm panels.

The adjustment by means of a thermostatic spring system allows to independently change the position of the cones based on the temperature of the air flow introduced.

| TECHNICAL SPECIFICATION AND USAGE LIMIT | | | | | | | | |
|---|--------------------------|---------------------|---|--|--|--|--|--|
| INSTALLATION HEIGHT | APPLICATIONS | MATERIALS | SURFACE FINISH | COLOR | FASTENING | | | |
| 2,7 to 6 m | Room cooling and heating | Aluminium and steel | Epoxy powder coating resistant to impact and abrasion | Standard RAL 9010 - glossy RAL 9016 - glossy RAL 9003 - mat | by means of screws positioned on the diffuser neck | | | |

OA OA

GREEN BUILDING

Thanks also to the support of GreenMap, products manufactured by Tecnica srl contribute to obtain the credits of the major international rating systems for suistainable buildings:



Contributes to credits: IP, EA, MR, EO



Contributes to credits: THERMAL COMFORT, MATERIALS, COMMUNITY



BREEAM

Contributes to credits: MAN, HEA, WST

For further details about specific contributions to the credits indicated, contact Tecnica SrI

| TECHNICAL DATA | | | | | | | | |
|----------------|-------------|-------------|-----------|-----------|--|--|--|--|
| Model | Ø A [mm] | Ø B [mm] | C [mm] | D [mm] | | | | |
| DCSQ 100 | 96 | 595X595 | 85 | 33 | | | | |
| DCSQ 150 | 146 | 595X595 | 90 | 23 | | | | |
| DCSQ 160 | 156 | 595X595 | 90 | 28 | | | | |
| DCSQ 200 | 196 | 595X595 | 115 | 37 | | | | |
| DCSQ 250 | 246 | 595X595 | 135 | 37 | | | | |

APPLICATIONS REACH ROHS FINAL Building Air Conditioning design

*on request

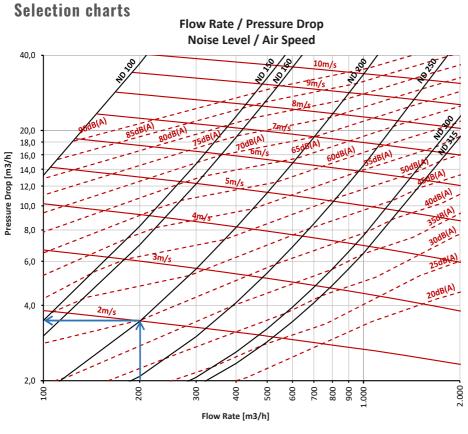


Diagram 1The diagram si

The diagram shows the pressure drop of the diffuser based on the flow rate with relative indication of the noise level without environmental attenuation and speed of the incoming air flow.

atmosphere and measured according to the following regulations:

ISO 5801:2017 Aeraulic Performance

Data referred to international standard

| ISO | 3741:2010 | Acoustic Performance |
|-----|-----------|----------------------|
| ISO | 5135:2020 | Acoustic Performance |
| ISO | 5801:2017 | Aeraulic Performance |

| C A L C U L A T I O N (input data) | | | | | | | |
|---------------------------------------|------------------------|--|--|--|--|--|--|
| Total Flow Rate | 2000 m ³ /h | | | | | | |
| Max. Noise Level | 40dB(A) | | | | | | |
| Number of diffusers expected | 10pz. | | | | | | |
| Throw | 1,20m | | | | | | |

| SELECTION | | | | | | | |
|------------------|-----------------------|--|--|--|--|--|--|
| Model | DCSC 200 | | | | | | |
| Flow Rate | 200 m ³ /h | | | | | | |
| Pressure Drop | +/-3,5Pa | | | | | | |
| Noise Level | 40dB(A) | | | | | | |
| Air Speed | 2,0m/s | | | | | | |
| Isothermal Throw | +/- 1,20m | | | | | | |

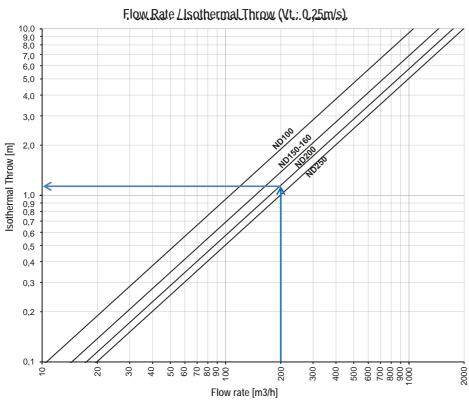


Diagram 2

The diagram shows the isothermal launch of the diffuser according to the flow rate with terminal speed (Vt) of 0,25m/s. The horizontal launch data are to be understood in isothermal conditions.

For $\Delta T < 10^{\circ}C$ multiply the horizontal throw by 0,85.

NOTE: Pressure drop data shown in the diagram refer to the diffuser with the damper fully open.

| MODEL | DESCRIPTION | U.M. | Vi (m/s) | | | | | | | | | |
|---------------------------|--------------------------|-------|----------|-----|-----|------|------|------|-------|-------|-------|-------|
| — MODEL | | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
| 100 Ak 0,0059m² | Flow Rate | m3/h | 21 | 42 | 63 | 84 | 105 | 127 | 148 | 169 | 190 | 211 |
| | Pressure Drop | Pa | 1,8 | 4,2 | 7,1 | 10,5 | 14,3 | 18,5 | 23,3 | 28,5 | 34,2 | 40,3 |
| | Horizontal Throw Vt 0,25 | mt | 0,2 | 0,4 | 0,6 | 0,8 | 1,0 | 1,2 | 1,4 | 1,6 | 1,8 | 2,0 |
| | Noise Level | dB(A) | 52 | 60 | 68 | 75 | 83 | 91 | 98 | 106 | 114 | 121 |
| | Min. Installation height | mt | 2,5 | 2,6 | 2,7 | 2,8 | 2,9 | 3,0 | 3,1 | 3,2 | 3,3 | 3,4 |
| | Max. Installation height | mt | 3,2 | 3,3 | 3,4 | 3,5 | 3,6 | 3,7 | 3,8 | 3,9 | 4,0 | 4,1 |
| | Flow Rate | m3/h | 54 | 107 | 161 | 215 | 268 | 322 | 376 | 429 | 483 | 537 |
| | Pressure Drop | Pa | 1,8 | 3,8 | 6,2 | 9,1 | 12,5 | 16,3 | 20,7 | 25,4 | 30,7 | 36,4 |
| 150 | Horizontal Throw Vt 0,25 | mt | 0,4 | 0,7 | 1,1 | 1,5 | 1,9 | 2,2 | 2,6 | 3,0 | 3,3 | 3,7 |
| Ak 0,0149m ² | Noise Level | dB(A) | 38 | 45 | 52 | 59 | 66 | 72 | 79 | 86 | 93 | 100 |
| | Min. Installation height | mt | 2,5 | 2,6 | 2,7 | 2,8 | 2,9 | 3,0 | 3,1 | 3,2 | 3,3 | 3,4 |
| | Max. Installation height | mt | 3,2 | 3,3 | 3,4 | 3,5 | 3,6 | 3,7 | 3,8 | 3,9 | 4,0 | 4,1 |
| | Flow Rate | m3/h | 60 | 120 | 181 | 241 | 301 | 361 | 421 | 482 | 542 | 602 |
| | Pressure Drop | Pa | 1,8 | 3,7 | 6,1 | 9,0 | 12,3 | 16,1 | 20,3 | 25,1 | 30,3 | 35,9 |
| 160 | Horizontal Throw Vt 0,25 | mt | 0,4 | 0,8 | 1,2 | 1,7 | 2,1 | 2,5 | 2,9 | 3,3 | 3,7 | 4,1 |
| Ak 0,0167m ² | Noise Level | dB(A) | 36 | 43 | 50 | 57 | 63 | 70 | 77 | 84 | 90 | 97 |
| | Min. Installation height | mt | 2,5 | 2,6 | 2,7 | 2,8 | 2,9 | 3,0 | 3,1 | 3,2 | 3,3 | 3,4 |
| | Max. Installation height | mt | 3,2 | 3,3 | 3,4 | 3,5 | 3,6 | 3,7 | 3,8 | 3,9 | 4,0 | 4,1 |
| | Flow Rate | m3/h | 100 | 201 | 301 | 402 | 502 | 602 | 703 | 803 | 904 | 1.004 |
| | Pressure Drop | Pa | 1,8 | 3,5 | 5,6 | 8,2 | 11,3 | 14,9 | 18,9 | 23,4 | 28,4 | 33,8 |
| 200 | Horizontal Throw Vt 0,25 | mt | 0,6 | 1,2 | 1,7 | 2,3 | 2,9 | 3,5 | 4,0 | 4,6 | 5,2 | 5,8 |
| Ak 0,0279m ² | Noise Level | dB(A) | 34 | 40 | 46 | 52 | 58 | 64 | 70 | 76 | 82 | 88 |
| | Min. Installation height | mt | 2,5 | 2,6 | 2,7 | 2,8 | 2,9 | 3,0 | 3,1 | 3,2 | 3,3 | 3,4 |
| | Max. Installation height | mt | 3,2 | 3,3 | 3,4 | 3,5 | 3,6 | 3,7 | 3,8 | 3,9 | 4,0 | 4,1 |
| | Flow Rate | m3/h | 161 | 323 | 484 | 645 | 806 | 968 | 1.129 | 1.290 | 1.452 | 1.613 |
| 250 Ak 0,0448m² | Pressure Drop | Pa | 1,8 | 3,2 | 5,2 | 7,6 | 10,4 | 13,8 | 17,6 | 21,8 | 26,6 | 31,8 |
| | Horizontal Throw Vt 0,25 | mt | 0,8 | 1,6 | 2,4 | 3,2 | 4,1 | 4,9 | 5,7 | 6,5 | 7,3 | 8,1 |
| | Noise Level | dB(A) | 27 | 33 | 38 | 44 | 49 | 55 | 61 | 66 | 72 | 77 |
| | Min. Installation height | mt | 2,5 | 2,6 | 2,7 | 2,8 | 2,9 | 3,0 | 3,1 | 3,2 | 3,3 | 3,4 |
| | Max. Installation height | mt | 3,2 | 3,3 | 3,4 | 3,5 | 3,6 | 3,7 | 3,8 | 3,9 | 4,0 | 4,1 |


ASSEMBLY INSTRUCTION



Thermostatic System Detail

The self-adjusting system for the central cones is made with harmonic steel springs with a thermostatic effect which allow to correctly relocate the central body of the diffuser based on the temperature of the air introduced to obtain the appropriate throw.

INSTALLATION WITH CONNECTING SLEEVE AND BUTTERFLY DAMPER



Easy installation, adjustments and maintenance. The intermediate cones are easy to remove by turning the central hollow threaded pin. The damper fitted at the top of the diffuser is adjusted by acting on the adjustment screw through the hole in the threaded bar of the diffuser.

It is fastened to the ceiling by means of screws on the diffuser neck.

Adjustment

Central cone in low position: optimal position in cooling conditions in order to have the largest horizontal diffusion radius without creating discomfort in the occupied area in rooms with an ideal height between 3 and 4 m. With this configuration, you have the best pressure drop, velocity and sound level conditions. The maximum temperature difference (DI) between the ambient air and the air flowing from the diffuser to obtain the optimal induction conditions is 12°C.

Central cone in high position: optimal position for particularly high rooms up to 6 m and in heating conditions, as you obtain a vertical throw that resists the convective motion of the ambient air.

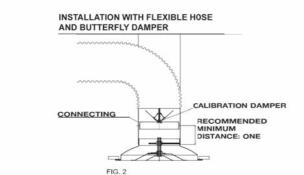


Fig. 1 Installation with butterfly damper

- Fit the damper on the connecting sleeve, if possible keeping a distance with respect to the diffuser of one nominal diameter but not less than 5 cm.
- Unscrew the central cones from the diffuser and fasten the external housing on the connecting sleeve.
- Screw the central cones onto the external housing.
- Adjust the internal cones according to the desired diffusion parameters
- Adjust the damper through the central hole in the threaded bar of the diffuser.

INSTALLATION WITH CONNECTING SLEEVE AND COLLECTION DAMPER

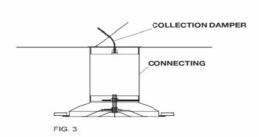


Fig. 2 Installation on flexible hose with butterfly damper

- · Hang the diffuser on the ceiling or fasten it on the false ceiling.
- · Fasten the damper on the connecting sleeve.
- Fit the connecting sleeve in the diffuser.
- Fit the flexible duct on the connecting sleeve and fasten it with a hose clamp.

Fig. 3 Installation with connecting sleeve and collection damper

- Fit the damper on the connecting sleeve in proximity of the hole in the main duct and fasten it with screws or rivets.
- Adjust the damper.
- Fasten the diffuser on the connecting sleeve.
- Finally adjust the flow rate by acting on the damper through the central hole in the threaded bar.